## **Package Contents**



innex Meeting Hub CT Series

**Quick Start Guide** 

65", 75", 86"



## Accessories bag

# **Overview**





Button		Description	
Ċ	Power	Short press to power on (blue light) / off (red light) display.	
:	Menu	Open / close display menu.	
⊐»	Vol +	Volume up / Right (in menu).	
¢	Vol -	Volume down / Left (in menu).	
^	Up	Up (in menu).	
$\sim$	Down	Down (in menu).	
ок	Confirm	Confirm (in menu).	



Front ports	Details
Type-C	Connect a device via USB-C cable or USB-C drive. (USB with DP ALT & PD enabled)
USB 3.0 *2	Connect USB devices.





(c) VESA Mount 65" : 500 mm (19.7 in) x 400 mm (15.7 in) 75" : 600 mm (23.6 in) x 400 mm (15.7 in) 86" : 800 mm (31.5 in) x 400 mm (15.7 in)

## **Remote Control**



Display (white printing)

U	Power	⊄x	Mute
⇒	Vol -		Vol +
$\diamond$	Navigate	ок	Confirm
Ξ	Menu	٢	Switch source to Screen Share
HDMI 1	Switch source to HDMI 1	FRONT TYPE-C	Switch source to front type-C
OPS	Switch source to OPS	HDMI 2	Switch source to HDMI 2
TYPE-C	Switch source to rear type-c		

Camera (blue printing)

ſ	Ξo	Camera menu	¢	Return
	×.	Camera On/Off	00	Mirror OSD
	¥.	Mic On/Off	<u>698</u>	Auto-framing
	⊞	Gallery	62	Speaker tracking
	3	Manual	Q	Zoom out
	Ð	Zoom in	$\langle \rangle$	Adjust camera viewing angle

\*Use the remote control within 3m (9.84ft) to 6m (19.68ft) from the sensor on the product at an angle of 30° from the left and right.



\*Please install the Connect Pro Receiver before power on product.

Insert the Connect Pro Receiver into the HDMI port on top of the CT display. This port is exclusively for the receiver. If needed, secure it with the included M3 screws.





Connect Pro Receiver does not support hot plugging. Therefore, you must insert or remove the receiver when the display is powered off. Otherwise, the panel display or the receiver may be damaged.

# **Display menu**

Press the menu button on the display or remote control to open the display menu. Navigate using the arrow keys, and press OK to select and confirm your choice.





 Select an icon to switch sources, and select the "default" icon to set a source as default.



e: Select an image mode or customize your own settings by adjusting image properties.



Access extra display settings like language, aspect ratio, color range, and factory reset.





# Sources and connections

### OPS

Remove the metel cover on the OPS slot. Then, insert the OPS into the OPS slot on the back of display.



### HDMI 1 & HDMI 2

Connect your device by using a HDMI cable and USB B-A cable.



### Front & Rear Type-c

Connect your device using a USB-C to USB-C cable to a full-featured USB-C port on your laptop.



### Screen share

Switch the source to "Screen Share", follow the instructions on the Connect Pro interface to start sharing your screen.

## **Connect Pro**

With Connect Pro, the CT display supports screen sharing via Airplay, Miracast, Chromecast, and Innex Connect Pro Button. Access the built-in camera wirelessly from your laptop with the Innex Connect Pro Button.

Chromecast





	Item	Description
a	BYOM icon	Displays when the BYOM function is ready. If the BYOM icon doesn't appear, connect to the internet to activate the product or ensure the camera is connected to the display.
	Device icon	Displays the number of devices ready for screen sharing. Tap to view details.
b	Pin code	Enter this Pin code in the Connect Pro software to connect to the display and start screen sharing.
	Hotspot	Displays the hotspot status and provides a link to the hotspot page.
с	Wi-Fi	Displays the Wi-Fi status and provides a link to the Wi-Fi page.
	Settings	Provides a link to the settings page.
d	Arrow	Tap to expand or collapse the information page.
e	Info	Displays basic device information, including the device name and password needed for screen sharing.
f	Software	Provides links to download the software for Windows and access the quick guide for using it.
g	Source info	Displays screen share source options. Tap "More details" for a quick guide on how to use them.

9.0			Patana	8
ſ			E) Mercar	
L	o tener	= Mare	© Atom	I

	Item	Description
h	BYOM	Displays information about the camera, microphone, and speaker.
i	Hotspot	Advanced hotspot settings, including name, password, AP band, etc.
j	Wi-Fi	Search for Wi-Fi networks to connect and view internet details.
k	Miracast	Enable/disable Miracast and adjust its resolution settings.
ι	Language	Set the language for the Connect Pro interface.
m	Restart	Tap to restart Connect Pro.
n	More	Advanced settings, including device name, password, and Pin code.
0	About	Detailed device information, including MAC address, S/N number, and restore options.

### Innex Connect Pro Button

Please pair the button with display before use. Plug the Connect Pro Button into the USB port of receiver on the top of display, the pairing will start automatically. Follow on-screen instructions to complete setup.



Plug the Connect Pro Button into a full-featured USB-C laptop port. Once the status light turns slow flashing white, press the button to start or pause screen sharing.



To access display camera, microphone and speaker wirelessly, in your video conference software, select "Connect Pro" as your camera, microphone and speaker.



# Specification

FAQ

For any product related question please visit www.funtechinnovation.com/faq

### Display

Display Dimension	65", 75", 86"	Resolution	Ultra HD 3840 x 2160
Brightness	450 Typ.	Aspect Ratio	16:9
Contrast	1200:1	Response Time	8 ms Typ.
Dynamic Contrast	5000:1	Viewing Angle	178°
Glass Hardness	8H	NTSC	105%
Glass Thickness	3.2 mm (0.12 in)	Color Depth	1.07B Colors (8 bits+FRC)
Bonding Type	Zero bonding	Panel Frequency	60Hz
Back-Light	LED	Flicker Free	Yes

### Touch / Interactive

Touch Technology	Infrared Touch	Touch Tool	Stylus, Finger,
Touch Points	40 Points		Palm Eraser
Accuracy(over 90% area)	±1 mm (0.04 in)	MPP Support	Yes
Min. Object Size	2.5 mm (0.1 in)	Pen Tip Diameter	3 mm(0.12 in)/8 mm (0.31 in)
Touch Resolution	32768 x 32768	Palm Rejection	Yes
Touch Surface	Anti-Glare Glass	Tracking Rate	≤ 5ms
Pen Type	Passive Pen	Scan time (single point)	≥ 200Hz

### Speaker, Camera and Microphone

Speaker Output	15W *2
Built-in Camera	8MP Sony IMX-415 sensor with FOV 120°
Camera Function	Support Remote Control; Support Auto-Framing, Gallery, Speaker Tracking, Manual Mode
Microphone	8-Mic Array with Auto Gain Control/ ANR/ AEC

### Wireless Conferencing System

Device	Connect Pro Receiver
Protocol	Connect Pro Button (BYOM), Airplay, Miracast, Chromecast

#### Power

Power Supply	100V -240V AC	Concumption	65" : Max. ≤ 250W 75" : Max. ≤ 350W 86" : Max. ≤ 450W
Standby Mode	Yes	comsumption	

### **Operating & Storage Environment**

Operating Temperature	0°C (32°F)- 45°C(113°F)	Operating Humidity	10% - 90%
Storage Temperature	0°C (-4°F)- 45°C(140°F)	Storage Humidity	10% - 90%

### **Physical Specification**

Size	65″	75″	86″
Panel Dimension	1505 x 930 x 170 mm 59.3 x 36.6 x 6.7 in	1725 x 1055 x 170 mm 67.9 x 41.5 x 6.7 in	1970 x 1195 x 170 mm 77.6 x 47x 6.7 in
Package Dimension	1580 x 220 x1000 mm 62.2 x 8.7 x 39.4 in	1790 x 220 x 1165 mm 70.5 x 8.7 x 45.9 in	2045 x 220 x 1280 mm 80.5 x 8.7 x 50.4in
Net Weight	36 kg (79.4 lbs)	48 kg (105.8 lbs)	60.5 kg (133.4 lbs)
Gross Weight	45.5 kg (100.3 lbs)	60 kg (132.3 lbs)	74.5 kg (164.2 lbs)

### I/O Ports

Front	USB-C	1 (DP Alt 1.4 4k@60 in, USB 2.0, PD 20V/3.25A)	
	USB-A	2 (USB 3.0 Dynamic)	
Rear	HDMI In	2	
	HDMI Out	1	
	USB-A	2 (USB 3.0 Dynamic)	
	USB-C	1 (DP Alt 1.4 4K@60 in, USB 2.0)	
	USB-B for Touch	1 (USB 3.0)	
	USB-A	1 (USB 2.0 for service only)	
	SPDIF Out	1	
	RS232	1	
	OPS Slot	1	
	AC In	1	
Тор	HDMI (Custom)	1 (HDMI with Power 5V/3A, USB 2.0)	

#### Others

Connect Pro	Connect Pro Receiver *1, Connect Pro Button *2	
Accessories Box	Remote control *1, IR pen *2, Warranty Card M3 screw *2 (for Connect Pro Receiver) Quick start guide, Safety documents	
Accessories Bag	1.5M(a;sm) HDMI Cable *1, 1.5M(a;sm) UBB = A Cable *1, 3M(a;sm) USA Power Cable *1, 3M(a;sm) UL Power Cable *1, 3M(a;sm) UK Power Cable *1, 3M(a;sm) INDIA Power Cable *1 (optional), Wall anchor*8, Self-tapping screw *8	
Certification	CE, FCC	